



# The **TerraPi** Alpha

Place the SSD on a flat surface with the mounting holes facing upwards.  
Fasten the M3x6 screws on all 4 places as below.

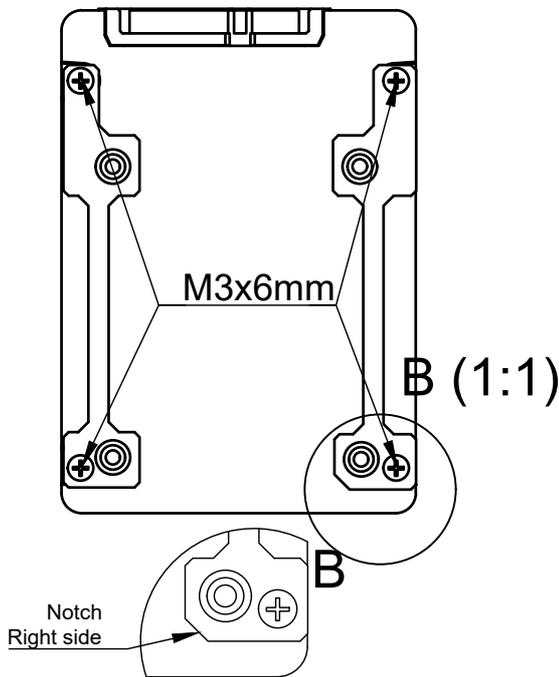


## NO FAN HAT Assembly

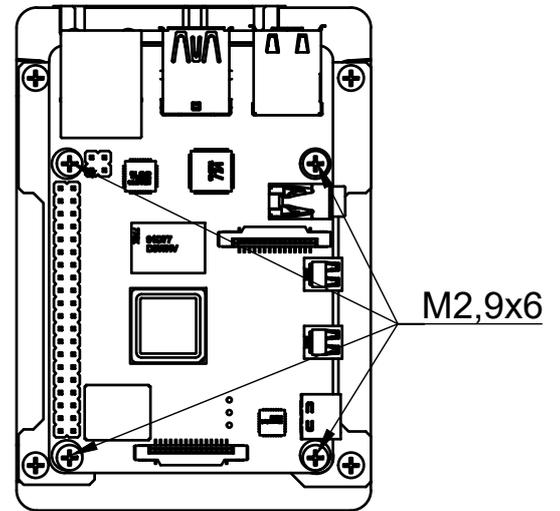

Place the Raspberry Pi over the mounting holes.  
Fasten the M2.9x6 screws on all 4 places as above.

## FAN HAT Assembly

1. Mount the FAN on the hat with 2 screws
2. Place the fan hat over the Pi mounting holes and place the M3x16mm screws

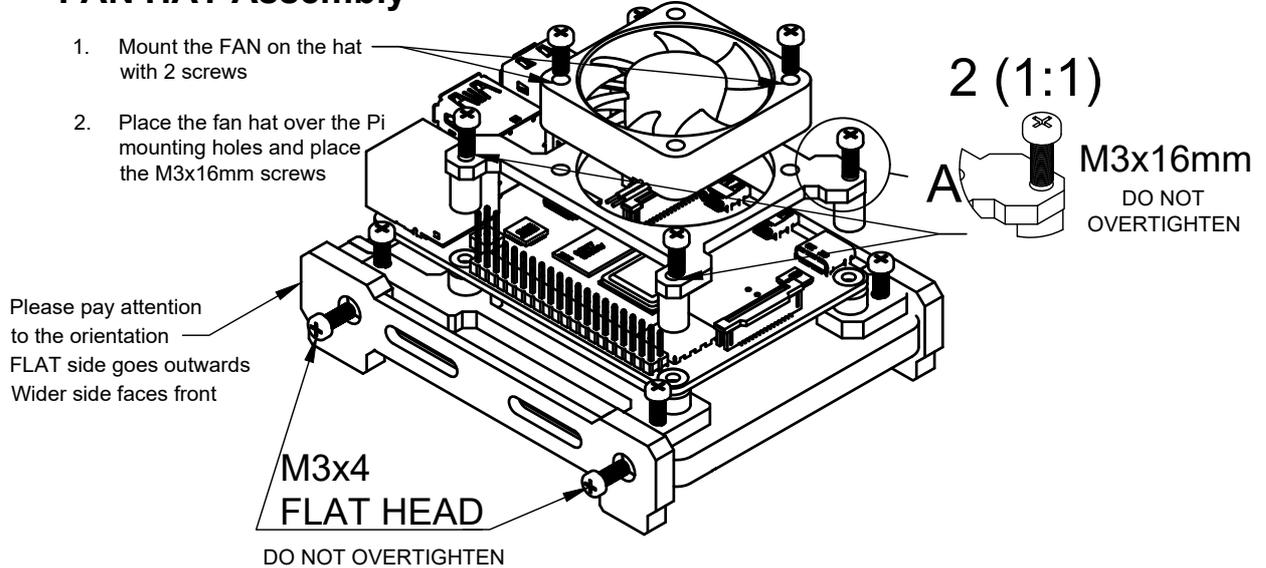

Dept. <b>TECH</b>	Technical reference <b>TerraPi A v1</b>	Created by <b>LL</b>	10/6/2020	Approved by <b>LL</b>	20201008
	Document type <b>TECH DRAWING</b>	Document status <b>FINAL</b>			
	Title <b>TerraPi Alpha v1 Assembly Instructions</b>	DWG No. <b>6</b>			
	Rev. <b>1</b>	Date of issue <b>Oct 6 2020</b>	Sheet <b>1/1</b>		